




# Polaroid S10 Speaker Assembly Replacement

Prerequisite Only

Written By: Christofer

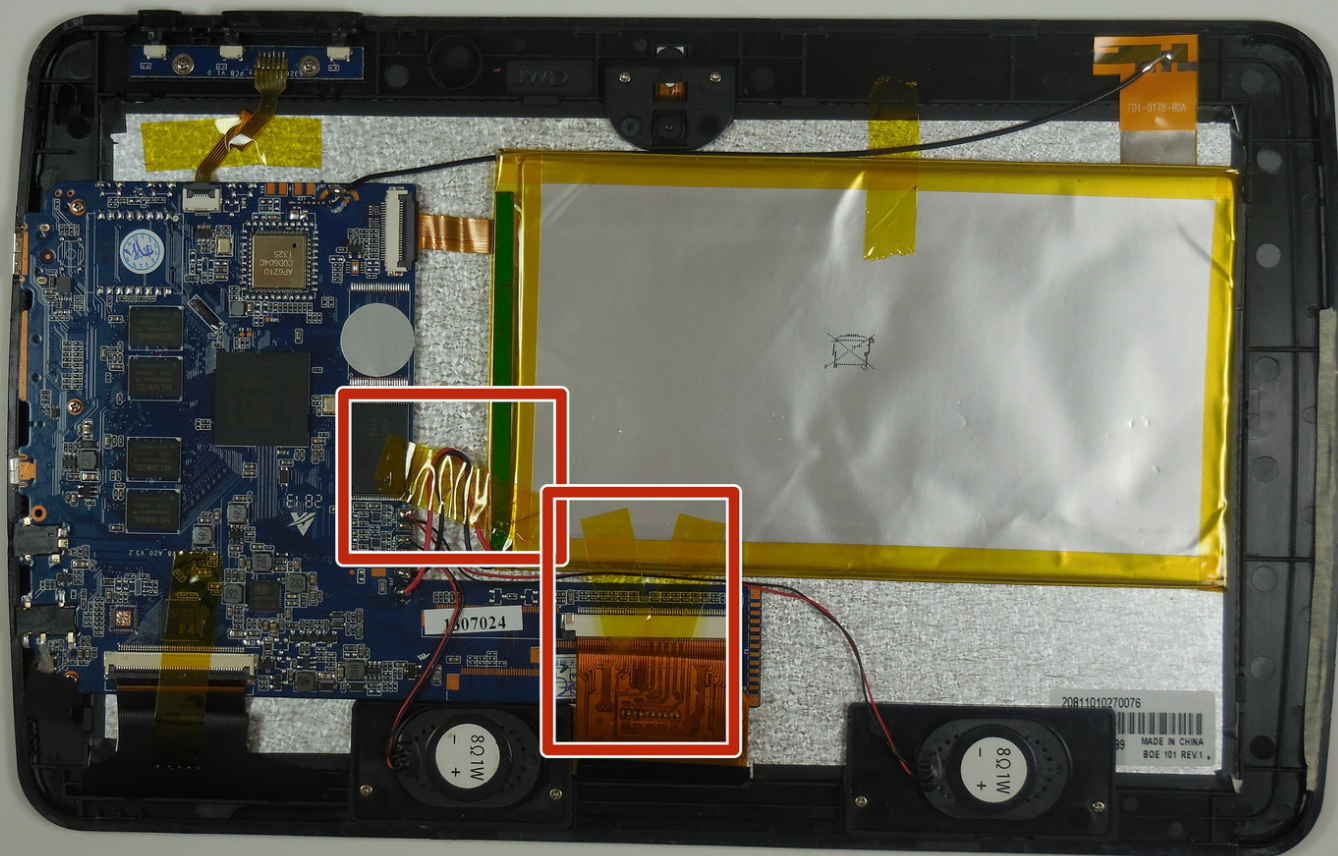



## TOOLS:

- [64 Bit Driver Kit](#) (1)
  - [Heavy-Duty Spudger](#) (1)
  - [iFixit Opening Picks set of 6](#) (1)
  - [Metal Spudger Set](#) (1)
-

## Step 1 — Removing the backcover



- Place an opening pick between the volume button and the back cover.
- ⓘ More than one pick may be needed but avoid placing more than two in the space.
- ⚠ Excessive force on the pick will break the volume button.
- Carefully use the metal spudger to remove the back cover.
- ⓘ A plastic snap noise is normal due to the tabs on the back cover.

## Step 2 — Speaker Assembly



- Use a heavy-duty nylon spudger to remove the tape.
- Unscrew the four 5 mm screws with the J000 screwdriver that connects the speakers.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-13 07:47:32 AM.